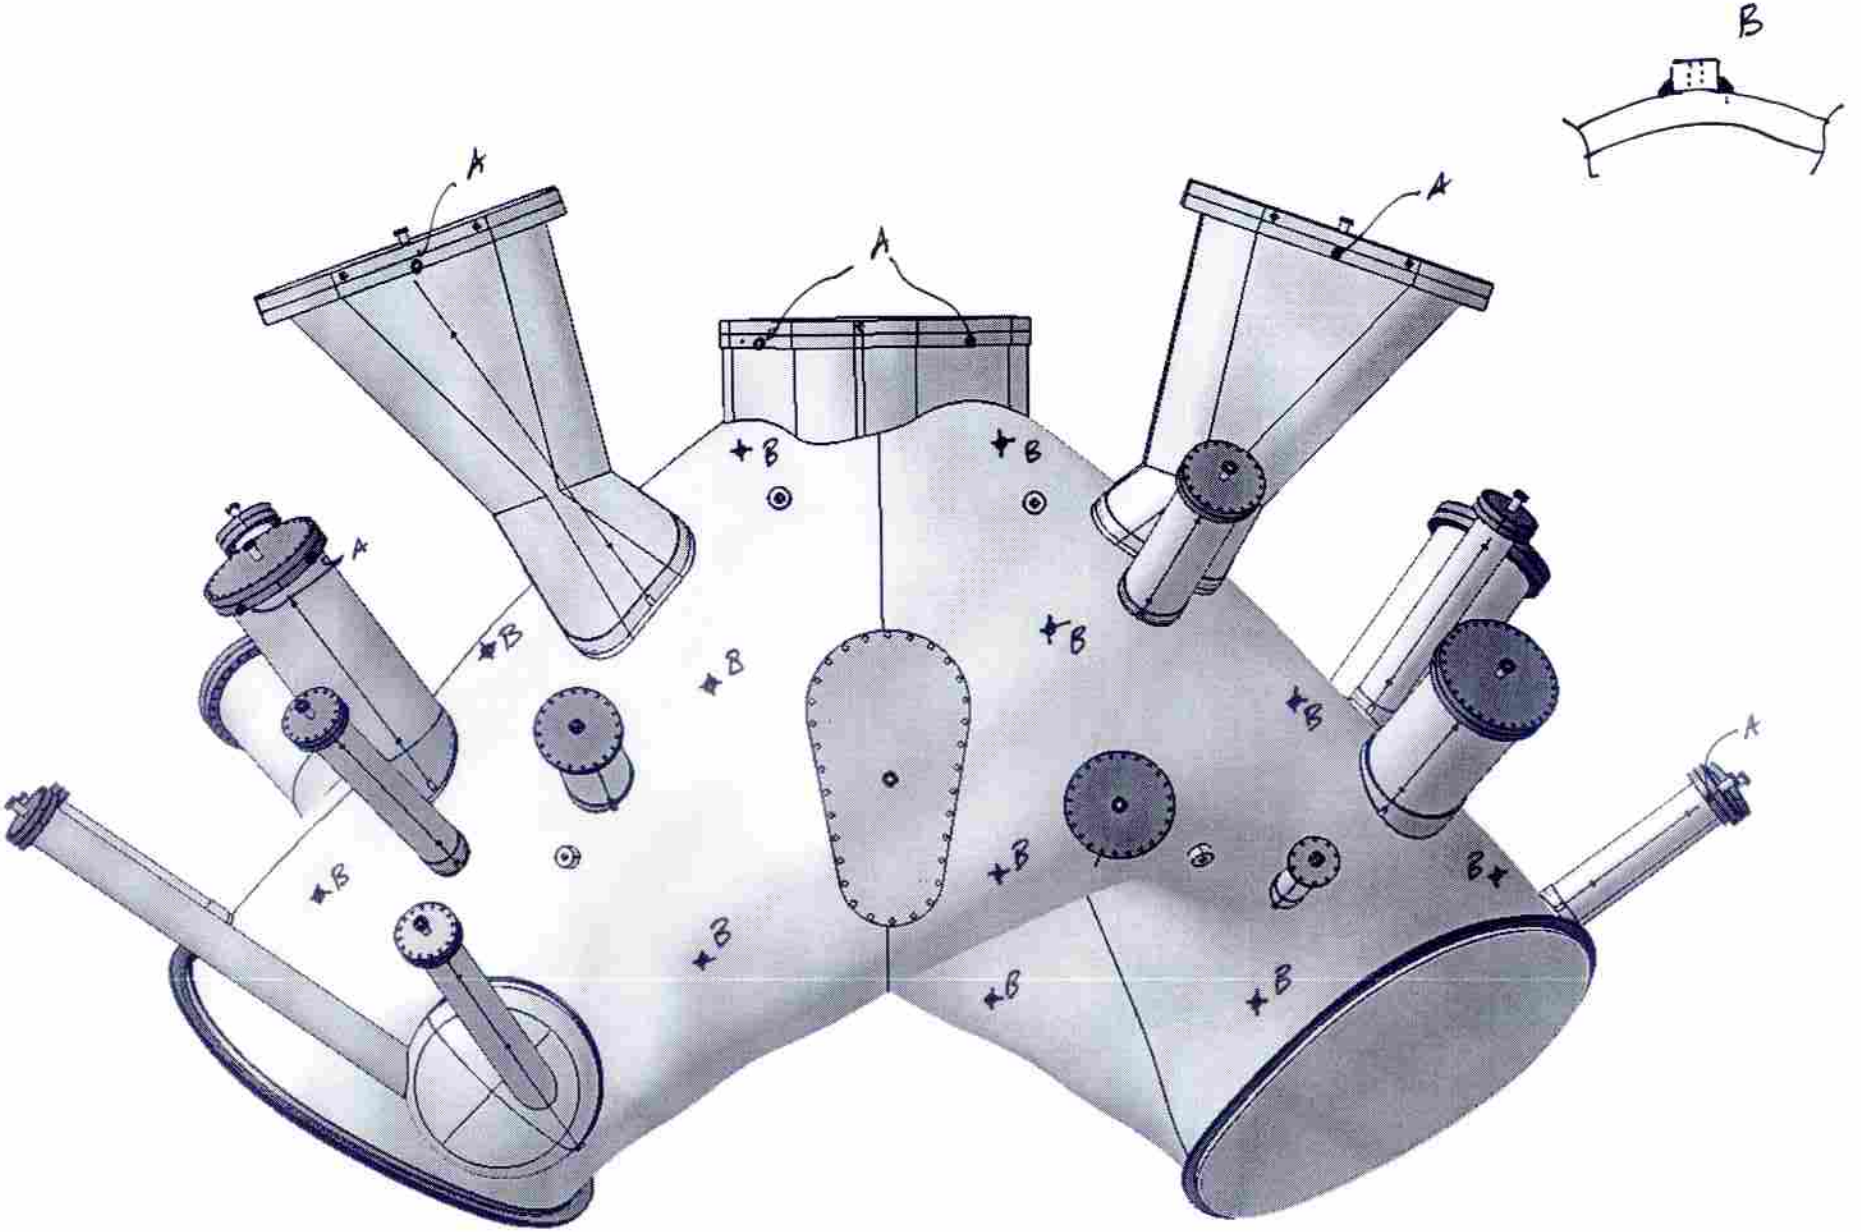

A = TYPICAL HOLE LOCATION ALL PORT FLANGES (IF NECESSARY)

B = TYPICAL STANDOFF