VERISURF X Installation

For use with MastercamX3 only

Warning: SIM should not be connected during Mastercam X3 install.


Mastercam X3 (CD 1) must be installed before installing Verisurf (CD 2)

Must be logged in with Administrator rights prior to installing software

1. Installing Mastercam X3






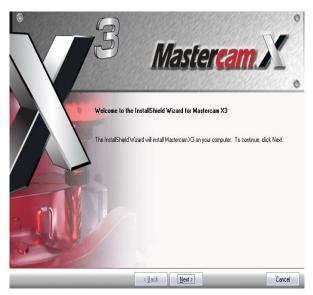

Page 1 of 9 Toll Free Support line: (888) 713-7201 <u>support@verisurf.com</u> <u>www.verisurf.com</u>



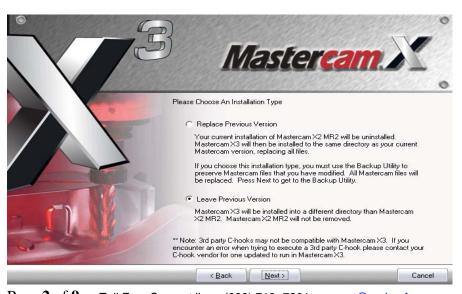

< Back


Next>

Cancel

Page 2 of 9 Toll Free Support line: (888) 713-7201 <u>support@verisurf.com</u> <u>www.verisurf.com</u>



Select *HASP* if using a standalone PC or Laptop; *Nethasp* if using a Network sim.

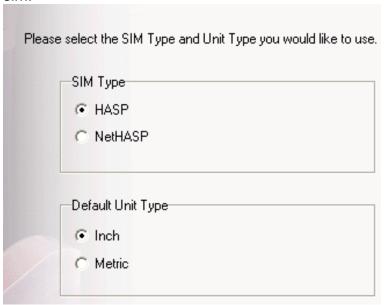


After Mastercam X3 has finished installing you can now Install Verisurf X

2. Installing Verisurf X




Select which Verisurf products you wish to install.

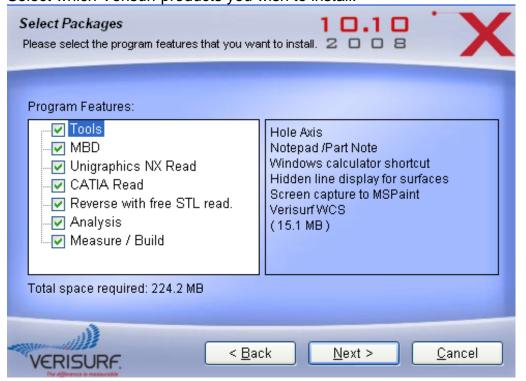

Page 4 of 9 Toll Free Support line: (888) 713-7201 <u>support@verisurf.com</u> <u>www.verisurf.com</u>

Verisurf will automatically default to the McamX3 folder. Verisurf must be installed into the same folder as McamX3.

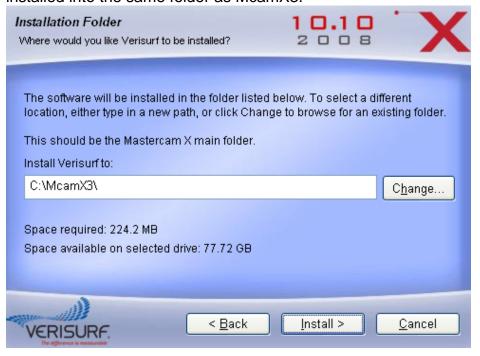




3. Installing the VDI - Verisurf Device Interface



After installing, the VDI, select which devices you will be using with Verisurf.


VERISURF	•
Please select the interface or interfaces that you wish to install.	
Laser Trackers API Tracker Interface FARO Tracker Interface SMX Tracker Interface Leica NetBEUI Interface Leica Tracker emScon Interface	3 Axis CMM's Caliper Designs ISA Interface Caliper Designs PCI Interface OmniTech Serial Counter Interface Oryzo Measurement System Verisurf CMM/USB Interface
Laser Scanners Microscan 3D Arm Scanner Leica T-Scan Interface Perceptron ScanWorks Interface Metris MV200/260 Interface	☐ Aicon ProCam Interface ☐ Flash Point 3D Creator Interface ☐ Metronor Camera Interface ☐ VStars Interface
Portable Arms CMM's FARO Serial Arm Interface FARO USB Arm Interface Immersion Microscribe Interface Metris MCA Arm Interface Microscribe X Arm Interface Romer WinRDS Arm Interface Baces 3D Arm Interface	Other Devices Leica Total Station Interface Leica Theodolite Interface LPT Laser Projector Interface Raytek Temperature Probe Machine Tool PC Interface Metris iGPS Interface Enable Remote Device Support Enable Catia V5 Support
Toggle Select All	Cancel <u>N</u> ext >>

Page 6 of 9 Toll Free Support line: (888) 713-7201 <u>support@verisurf.com</u> <u>www.verisurf.com</u>

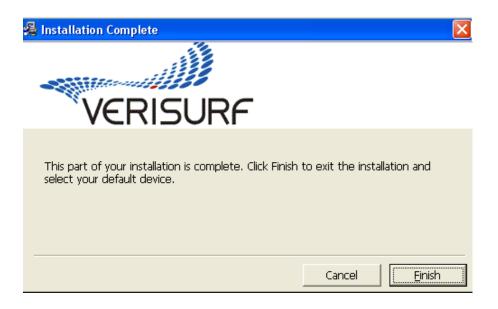


4. Entering Verisurf Access Codes


Select Verisurf / Verisurf Settings

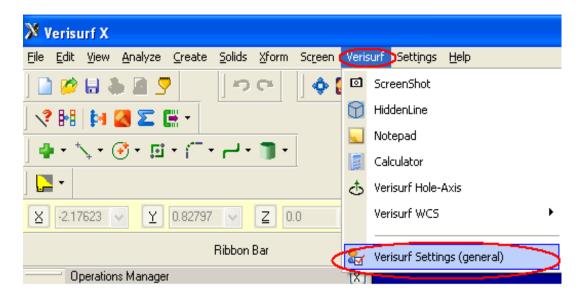

Select *Update* on the Verisurf Preferences Screen

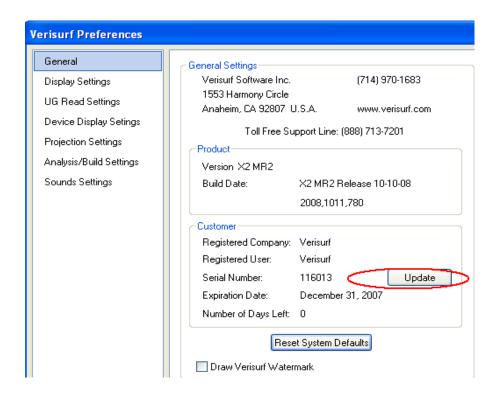

Enter the Verisurf Access code in the white box and then select save

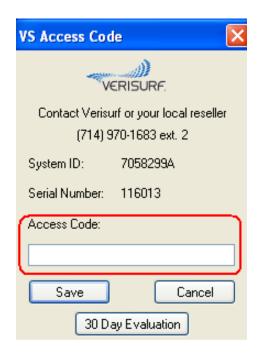


Page 8 of 9 Toll Free Support line: (888) 713-7201 <u>support@verisurf.com</u> <u>www.verisurf.com</u>


5. VERISURF MANUALS

Verisurf Manuals can be located in two different ways.

a. While Verisurf is open you can click on the reference guide icon which will open the manual for that particular product .

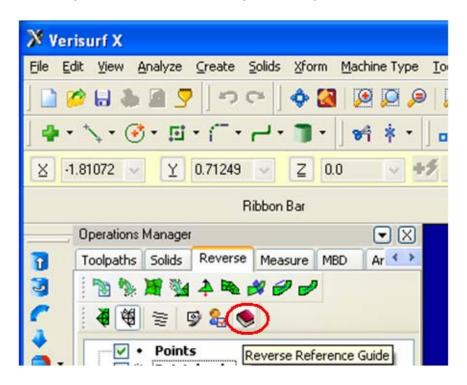

 All of the Verisurf Manuals are located in the McamX3/documentation/*Verisurf* file

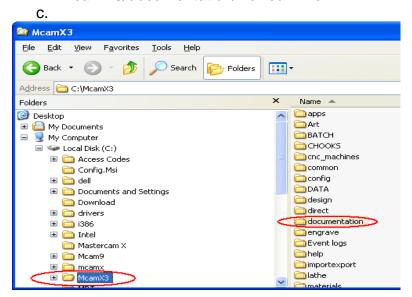

Page 9 of 9 Toll Free Support line: (888) 713-7201 <u>support@verisurf.com</u> <u>www.verisurf.com</u>